



XCcube
edition™

Easy Installation Guide

EX65-II / EX661

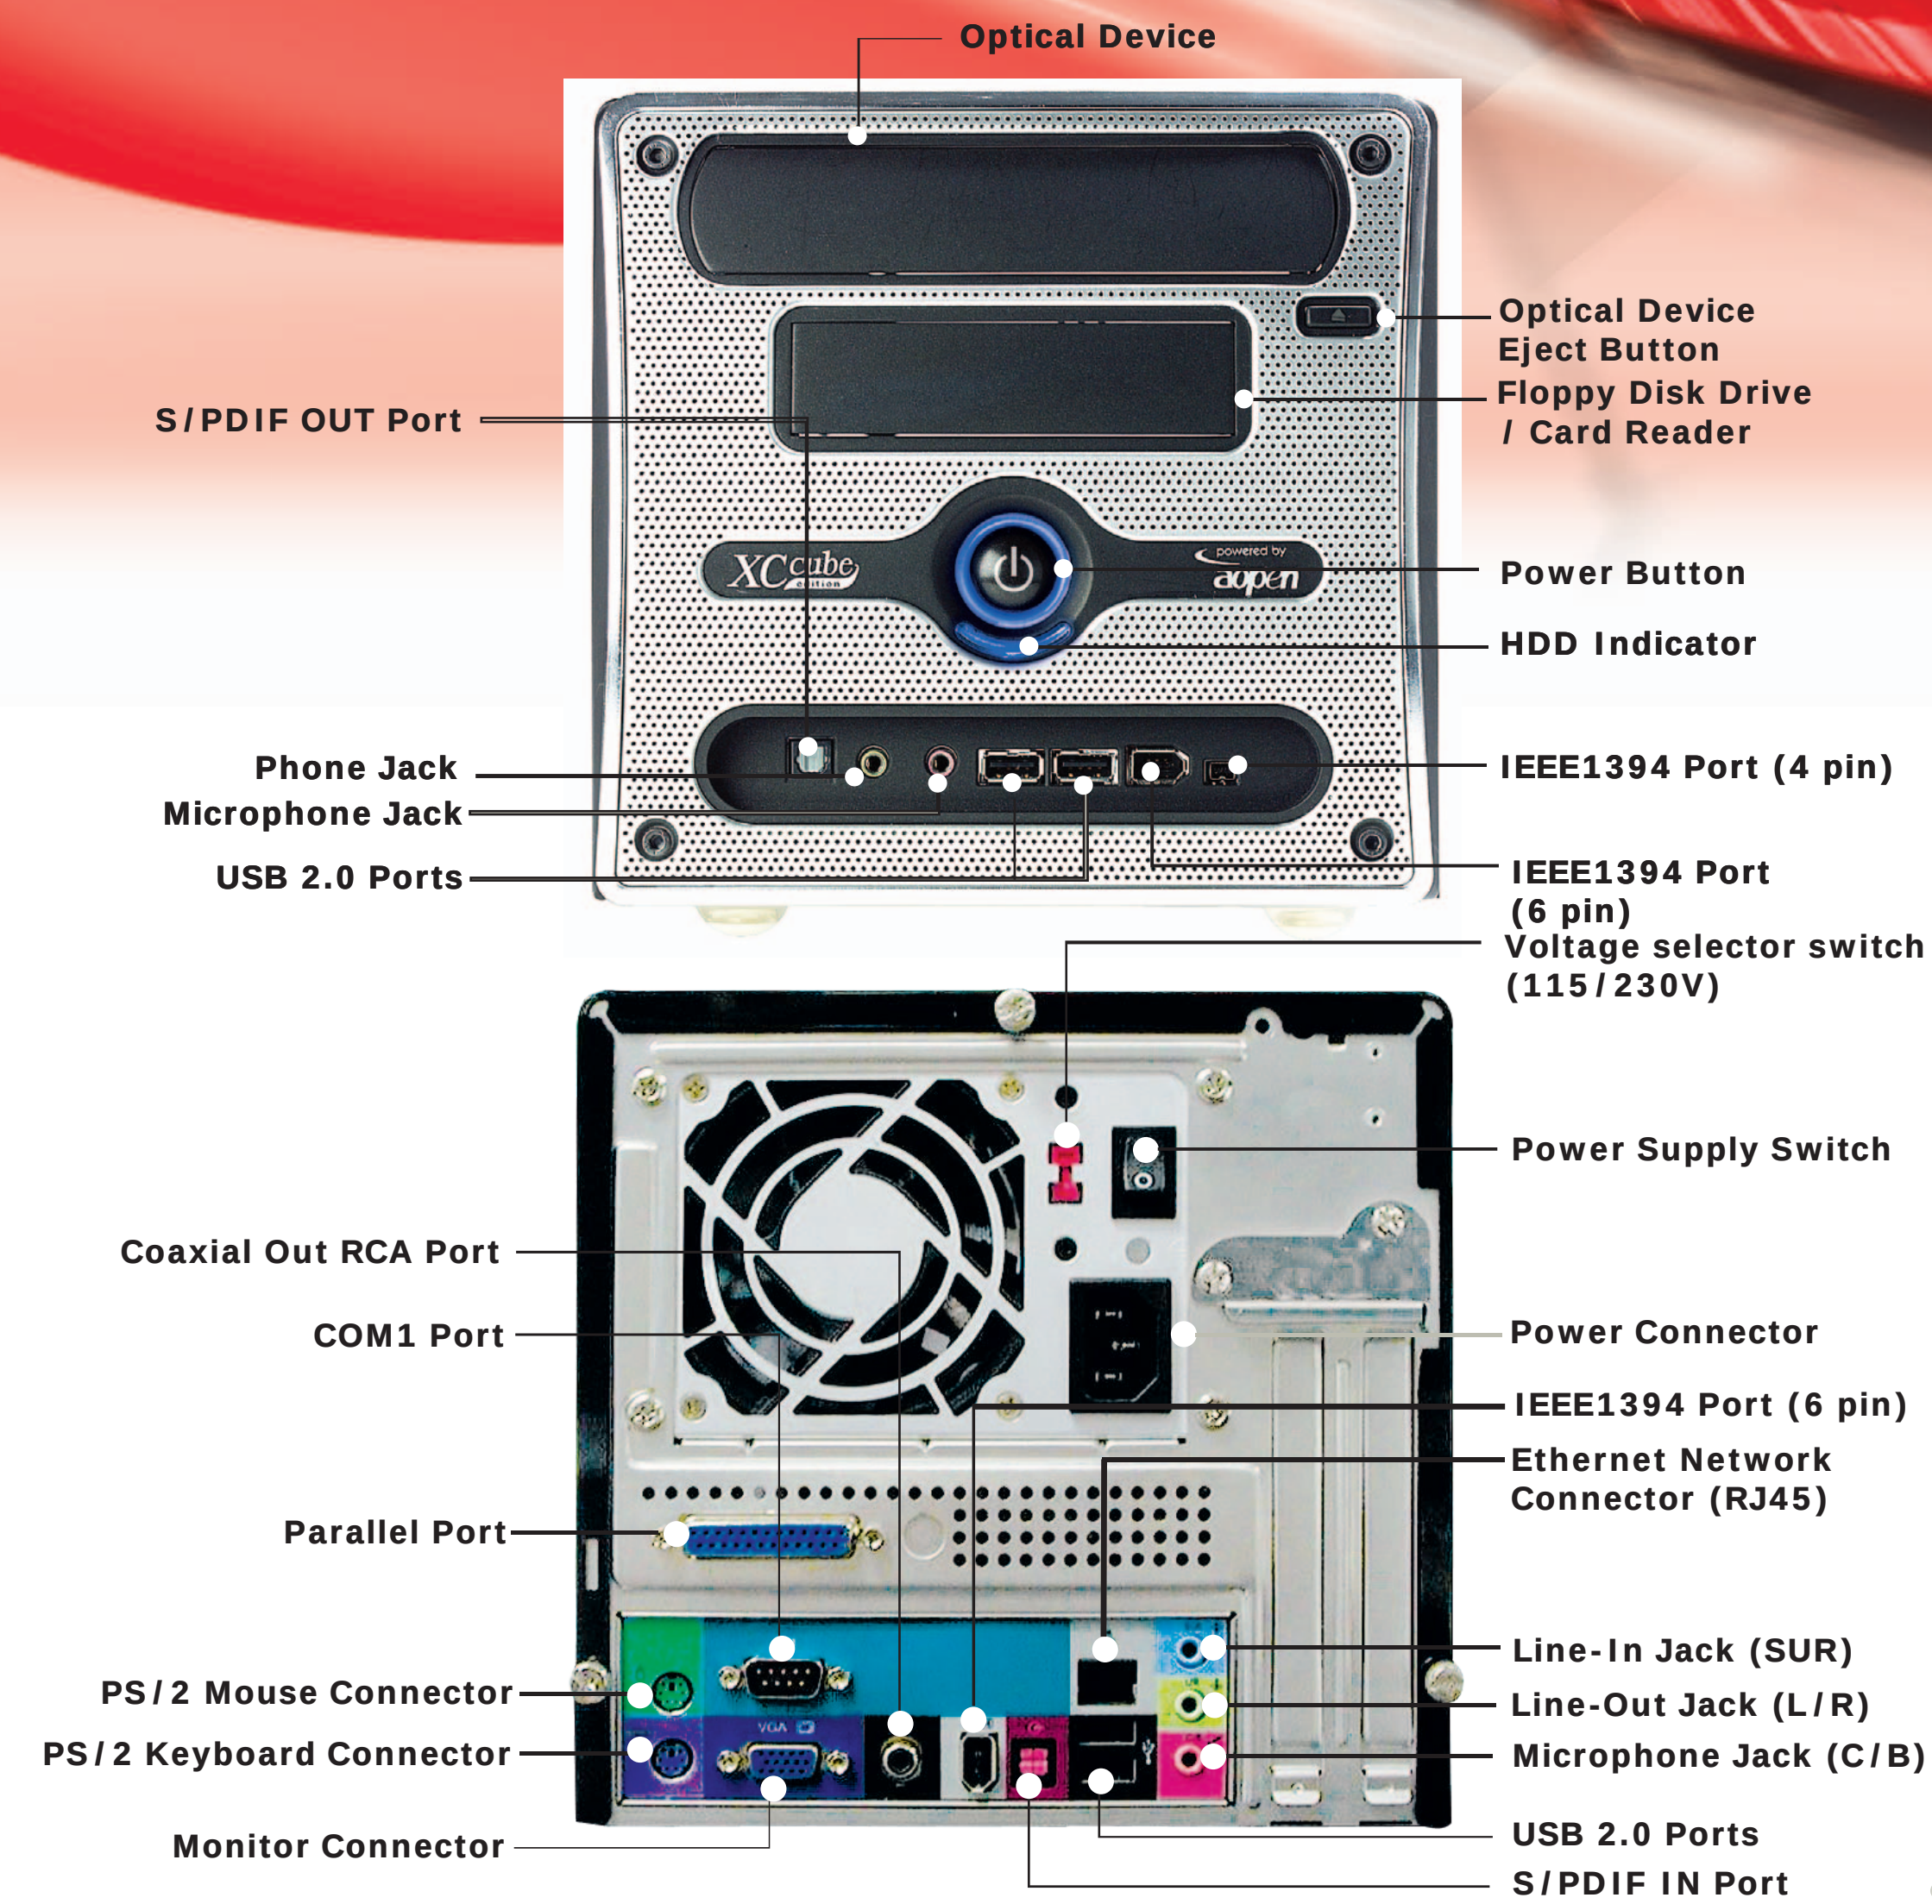


powered by
aopen

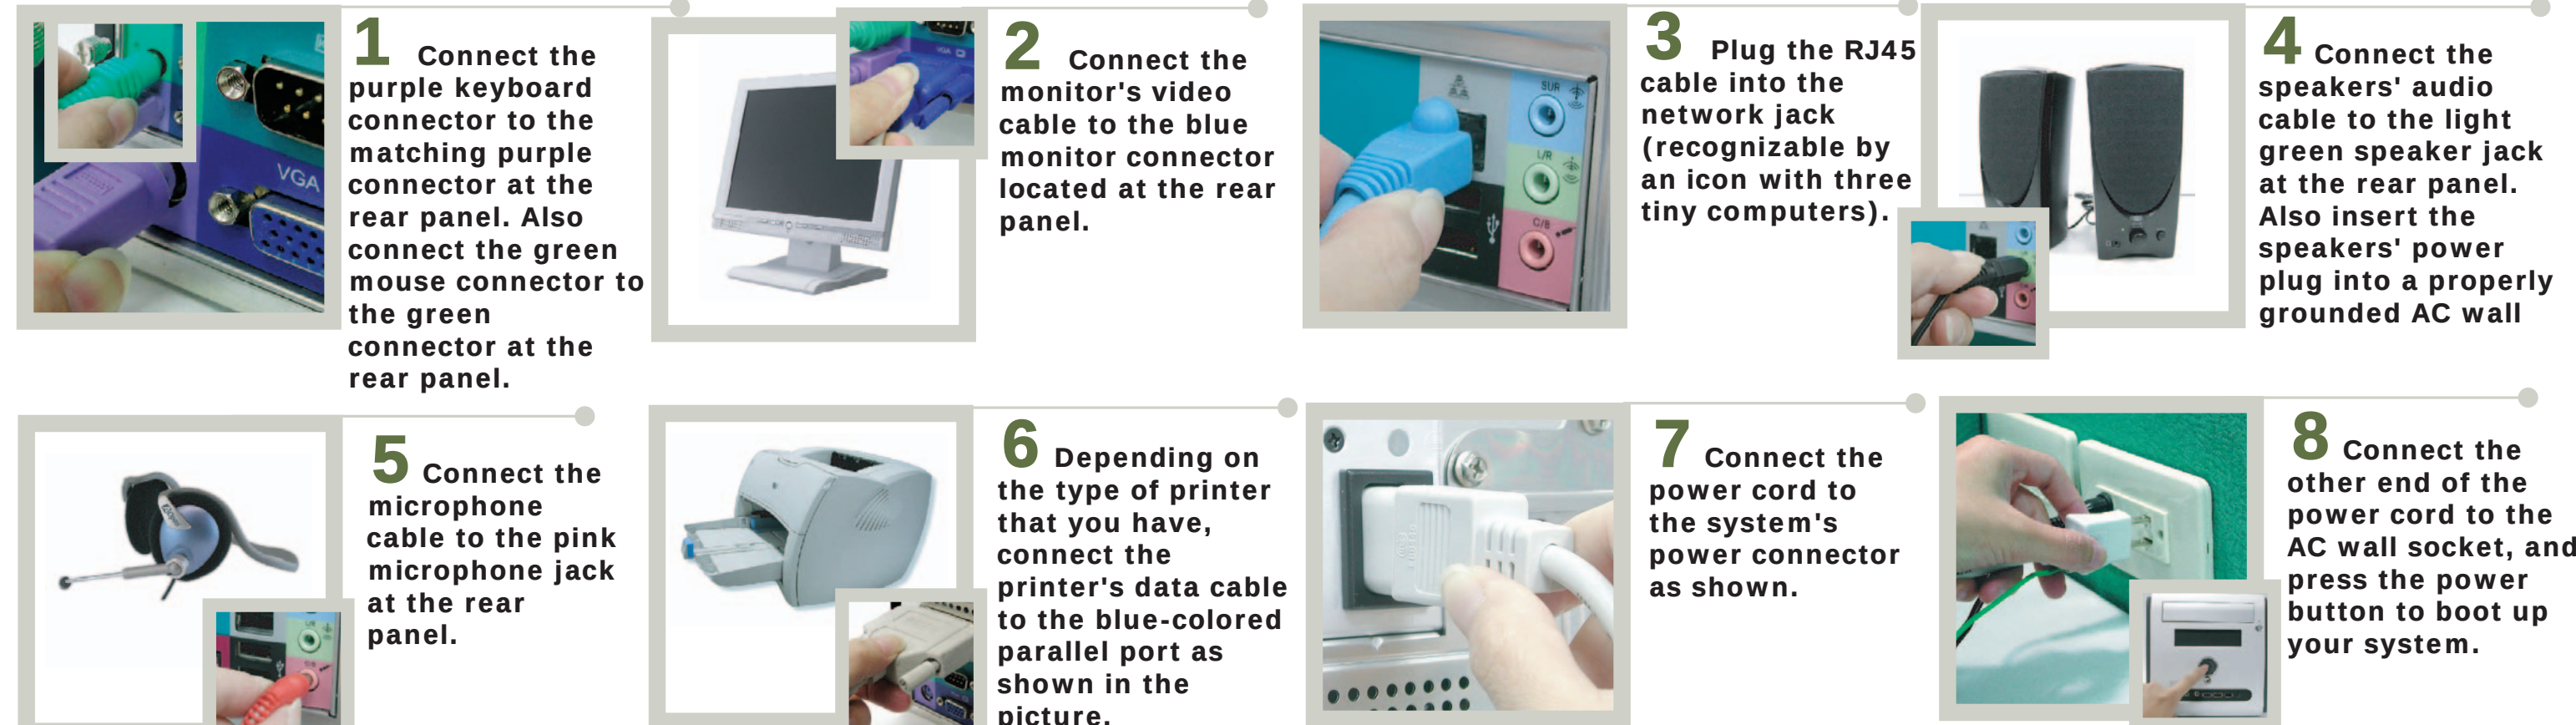


To learn more about AOpen XC Cube, visit us at <http://xc.aopen.com.tw>, <http://www.aopen.com>

P/N:49,EZ102,212 Doc.no:E265IIEZ61X-EG-E0405A

UX4SG-1394-II

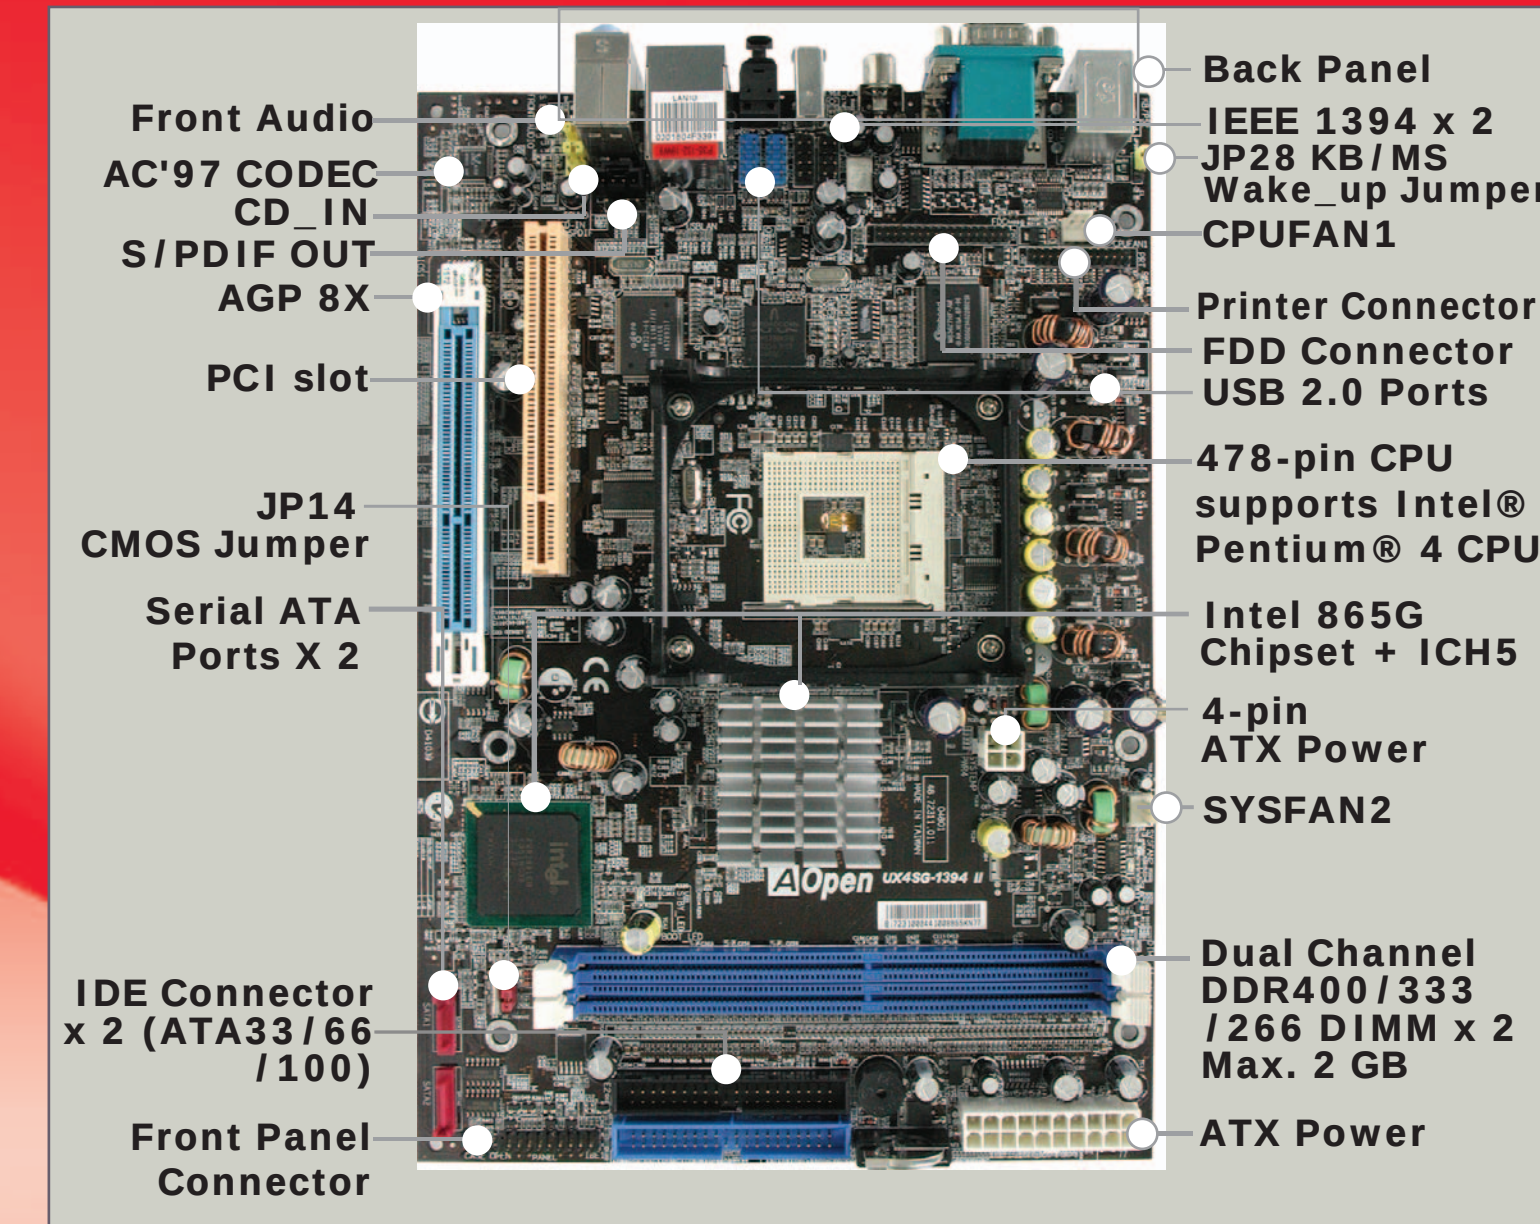

UX661

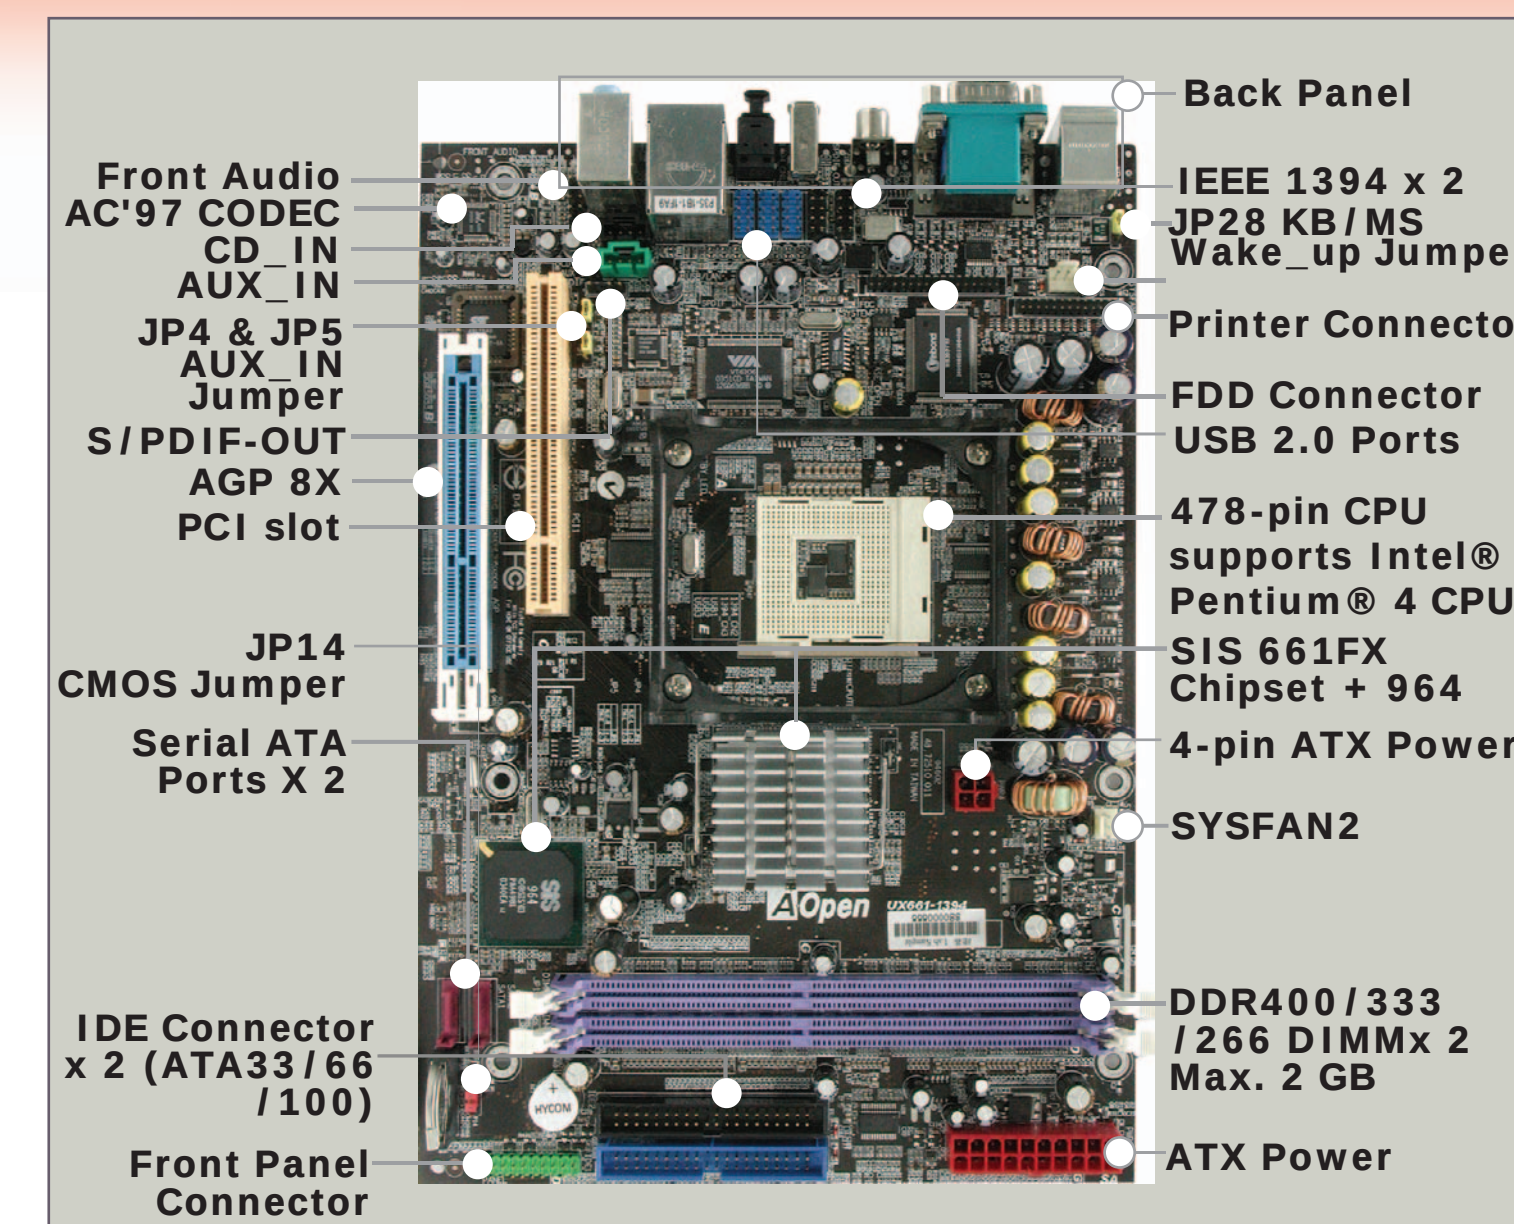


CPU Frequency Table

Vendor	Processor Core Freq.	FSB Clock	System Bus	Ratio
Intel	Pentium 4 Prescott 3.6GHz	200MHz	800MHz	18 x
Intel	Pentium 4 Prescott 3.4GHz	200MHz	800MHz	17 x
Intel	Pentium 4 Prescott 3.2GHz	200MHz	800MHz	16 x
Intel	Pentium 4 Prescott 3.0GHz	200MHz	800MHz	15 x
Intel	Pentium 4 Prescott 2.8GHz	200MHz	800MHz	14 x
Intel	Pentium 4 Extreme Edition 3.2GHz	200MHz	800MHz	16 x
Intel	Pentium 4 Extreme Edition 3.0GHz	200MHz	800MHz	15 x
Intel	Pentium 4 3.40GHz	200MHz	800MHz	17 x
Intel	Pentium 4 3.20GHz	200MHz	800MHz	16 x
Intel	Pentium 4 3.00GHz	200MHz	800MHz	15 x
Intel	Pentium 4 2.80GHz	200MHz	800MHz	14 x
Intel	Pentium 4 2.60GHz	200MHz	800MHz	13 x
Intel	Pentium 4 2.40GHz	200MHz	800MHz	12 x
Intel	Pentium 4 3.06GHz	133MHz	533MHz	23 x
Intel	Pentium 4 2.80GHz	133MHz	533MHz	21 x
Intel	Pentium 4 2.66GHz	133MHz	533MHz	20 x
Intel	Pentium 4 2.53GHz	133MHz	533MHz	19 x
Intel	Pentium 4 2.40GHz	133MHz	533MHz	18 x
Intel	Pentium 4 2.26GHz	133MHz	533MHz	17 x
Intel	Pentium 4 2.50GHz	100MHz	400MHz	25 x
Intel	Pentium 4 2.40GHz	100MHz	400MHz	24 x
Intel	Pentium 4 2.20GHz	100MHz	400MHz	22 x
Intel	Pentium 4 2.00GHz	100MHz	400MHz	20 x
Intel	Pentium 4 1.80GHz	100MHz	400MHz	18 x
Intel	Celeron 2.80GHz	100MHz	400MHz	28 x
Intel	Celeron 2.60GHz	100MHz	400MHz	26 x
Intel	Celeron 2.50GHz	100MHz	400MHz	25 x
Intel	Celeron 2.40GHz	100MHz	400MHz	24 x
Intel	Celeron 2.30GHz	100MHz	400MHz	23 x
Intel	Celeron 2.20GHz	100MHz	400MHz	22 x
Intel	Celeron 2.10GHz	100MHz	400MHz	21 x
Intel	Celeron 2.00GHz	100MHz	400MHz	20 x



Note: With CPU changing rapidly, there might be fastest CPU on the market by the you received this installation guide. This table is kindly for your references only.

Cooler Installation


1 Put CPU cooler firmly onto the CPU retention module.

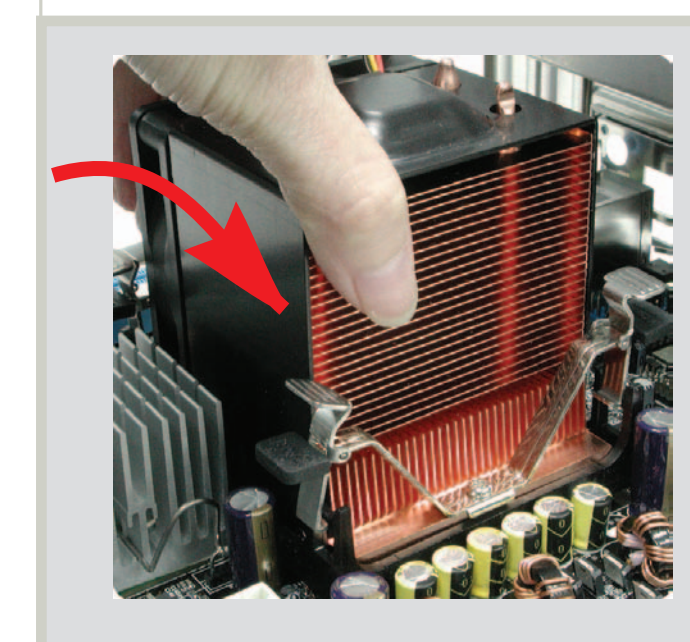

2 Connect the Fan cable onto the CPU FAN connector onboard.

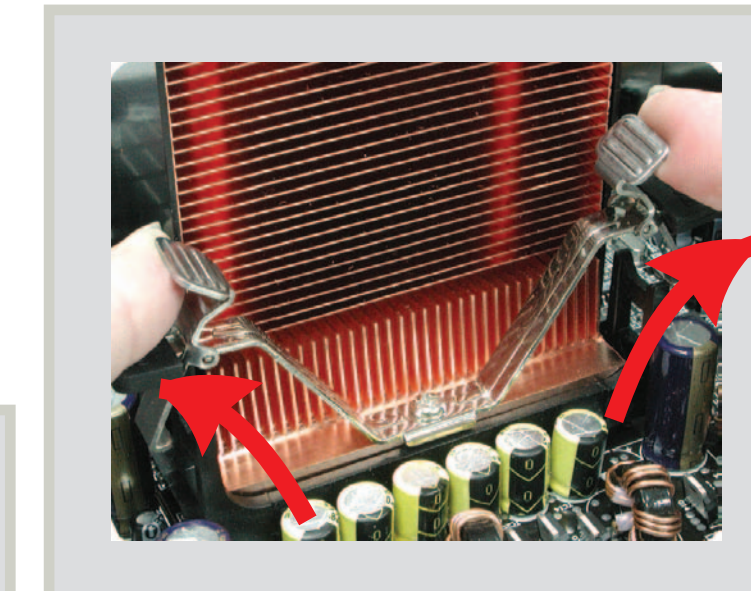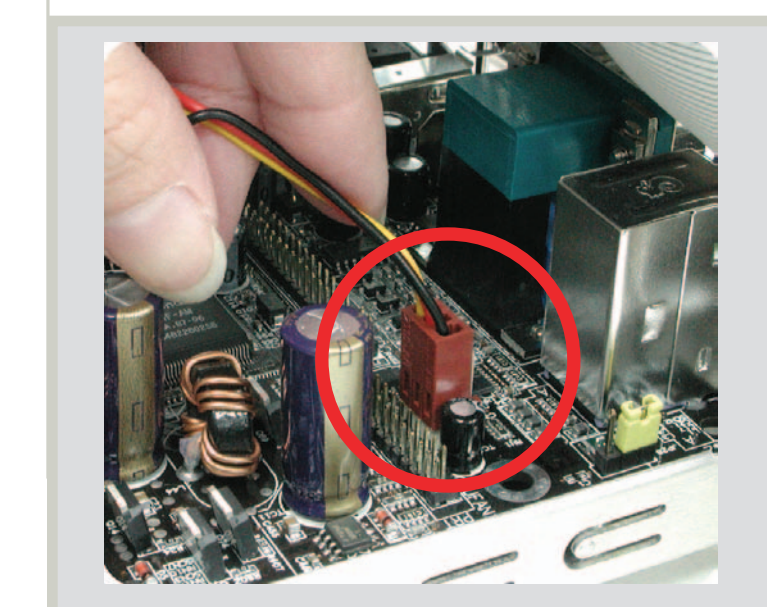

3 Push the iron plate up a bit.

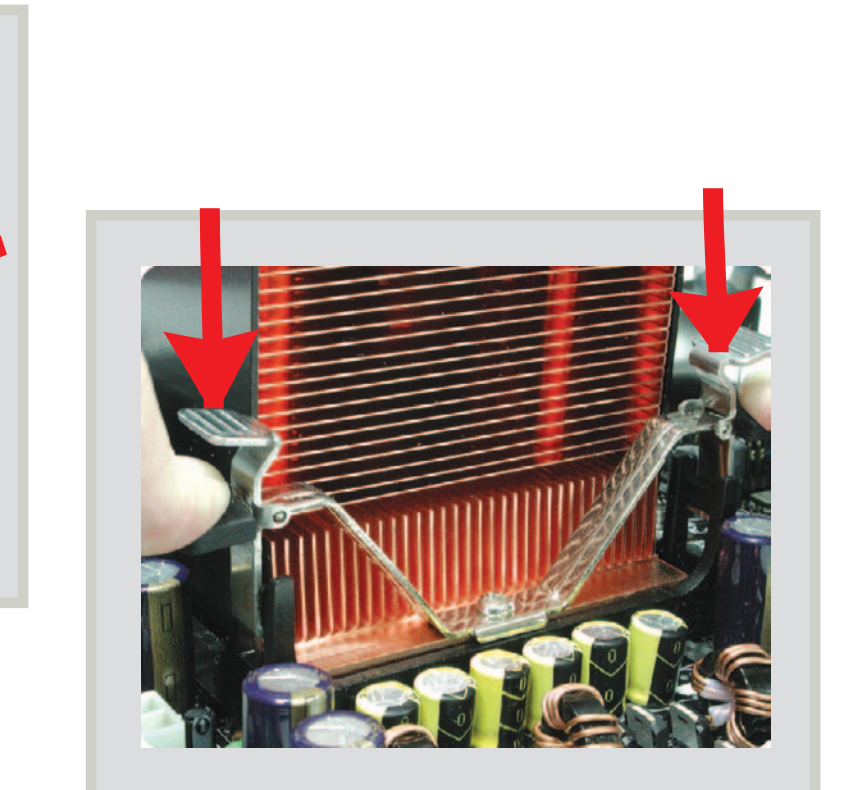

4 Press the black plastic plate downward till you hear a "clip" sound.

To learn more about AOpen XC Cube, visit us at <http://xc.aopen.com.tw>, <http://www.aopen.com>

P/N:49,EZ102,212 Doc.no:E265IIEZ61X-EG-E0405A

XCcube
edition™